

Please refer to the Owner's Guide for more detailed instructions.


NINJA CrushBOSS

SYSTEM

with Ninja BlendBOSS Tumbler
& Pro-Precision Food Processor



SmartMenu

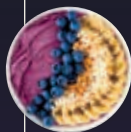

Velvety-smooth blends,
hands free with
smart ingredient detection

SmoothSense



Precise, professional,
knife-like chopping
and mincing

PrepIQ



Total control and
customization in
10 speed settings

Custom





Smart control center powers every program and perfects every recipe.

*NOTE: Attachments vary by model. Additional attachments available for purchase at ninjakitchen.co.uk

Vessel Installation

Pitcher:


- 1 Lower the pitcher onto the motor base with the handle on the right side.
- 2 Once the pitcher is sitting on the base, pull the handle toward you until it clicks in place (when pitcher is properly installed, the handle will sit at a 45° angle to the dial).

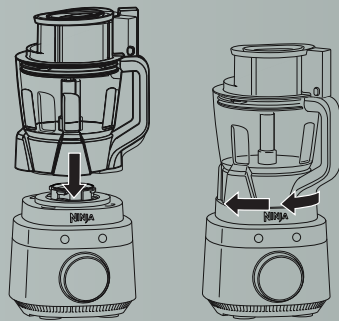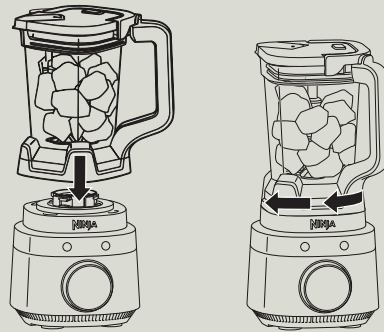

Included with LB4 Series only.

Food Processor Bowl:

- 1 Lower the food processor bowl onto the motor base with the handle on the right side.
- 2 Once the food processor bowl is sitting on the base, pull the handle toward you until it clicks in place (when bowl is properly installed, the handle will sit at a 45° angle to the dial).

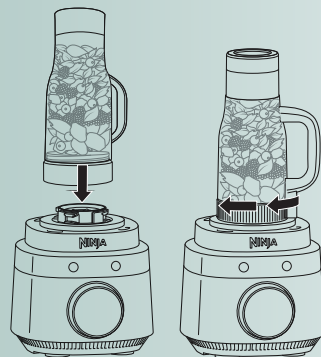

Included with LB3 and LB4 Series only.

Tumbler Cup:

- 1 Lower the tumbler cup onto the motor base with the handle on the right side, at roughly 2'clock.
- 2 Once the tumbler cup is sitting on the base, pull the handle toward you until it clicks in place (when cup is properly installed, the handle will sit at roughly 3 o'clock).


MultiBlade Disc

ONE DISC. ENDLESS POSSIBILITIES.

Elevate your prep game with the MultiBlade Disc. Slide blade attachments into disc, then swap out blades to thin slice, thick slice, crinkle cut, and more. Attachment names appear on the front side of each one. Use with the Processor Bowl only.

INSTALLING MULTIBLADE.

Place spindle inside bowl. With desired MultiBlade attachment installed, use the plastic grip to place the Disc over the spindle with the blade facing up.

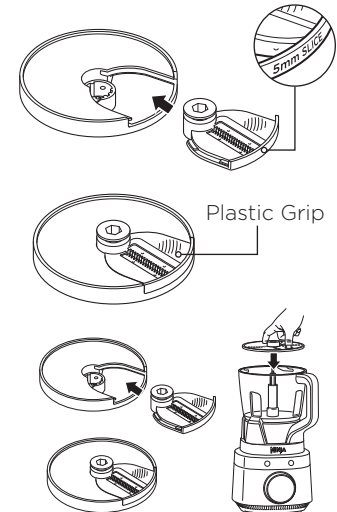


MULTIBLADE DISC

Main housing disc. Desired attachment will be installed in this disc.



THIN SLICE

 Perfect for uniform, thinly sliced vegetables; fruits; and cooked and par-frozen meat for salads, sandwiches, and stir fry.



THICK SLICE

Use for more substantial slices such as potatoes for gratins and bakes, vegetables for grilling, and fruit for pies and desserts.



 
SHRED

Ideal for shredding cheeses (such as cheddar and Monterey Jack) and vegetables (such as carrots and zucchini) for baked goods and salads.



CRINKLE CUT

Perfect for creating wavy slices of vegetables such as cucumbers and carrots. Best for prepping veggies when making pickles, chips, and baked recipes.



FRENCH FRY

Designed to cut potatoes for homemade fries.



JULIENNE

Perfect for cutting fruits and vegetables into long, thin, uniform matchstick-style strips. Best for potatoes, carrots, zucchini, bell peppers, and apples for stir-fry, spring rolls, coleslaw, and garnishes.

NOTE: Accessories included vary by model. Additional attachments available for purchase on ninjakitchen.co.uk

Thin Slice



Thick Slice



Shred



Crinkle Cut



French Fry



Julienne



Using the Control Panel

NOTE: Press the screen to **START** or **STOP** any program. Turn to select.




Power:
Press to power the unit on and off.



Pulse:
Use short presses for short pulses and long presses for long pulses.

Using the Dial

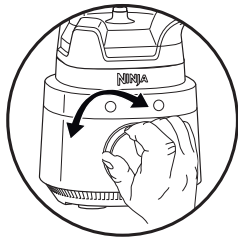


Rotate the dial to scroll through the available programs. The program illuminated at the top of the screen indicates your current selection. To make a selection, press on the dial screen.

Initial Setup

With Vessel Detection, the motor base automatically unlocks the programs tailored to the vessel that's installed—whether you're blending, chopping, or customizing speed, Vessel Detection ensures peak performance, consistent results, and a more intuitive experience from start to finish.


For Pitcher and Food Processor Bowl: The lid must be properly installed on the vessel to allow detection.

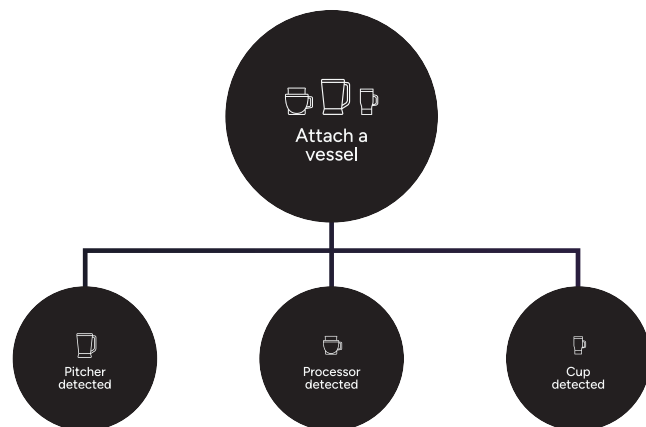

NOTE: Accessories included vary by model. Additional attachments available for purchase on ninjakitchen.co.uk

SmoothSense


Smart ingredient detection technology. SmoothSense delivers velvety-smooth blends, hands free.

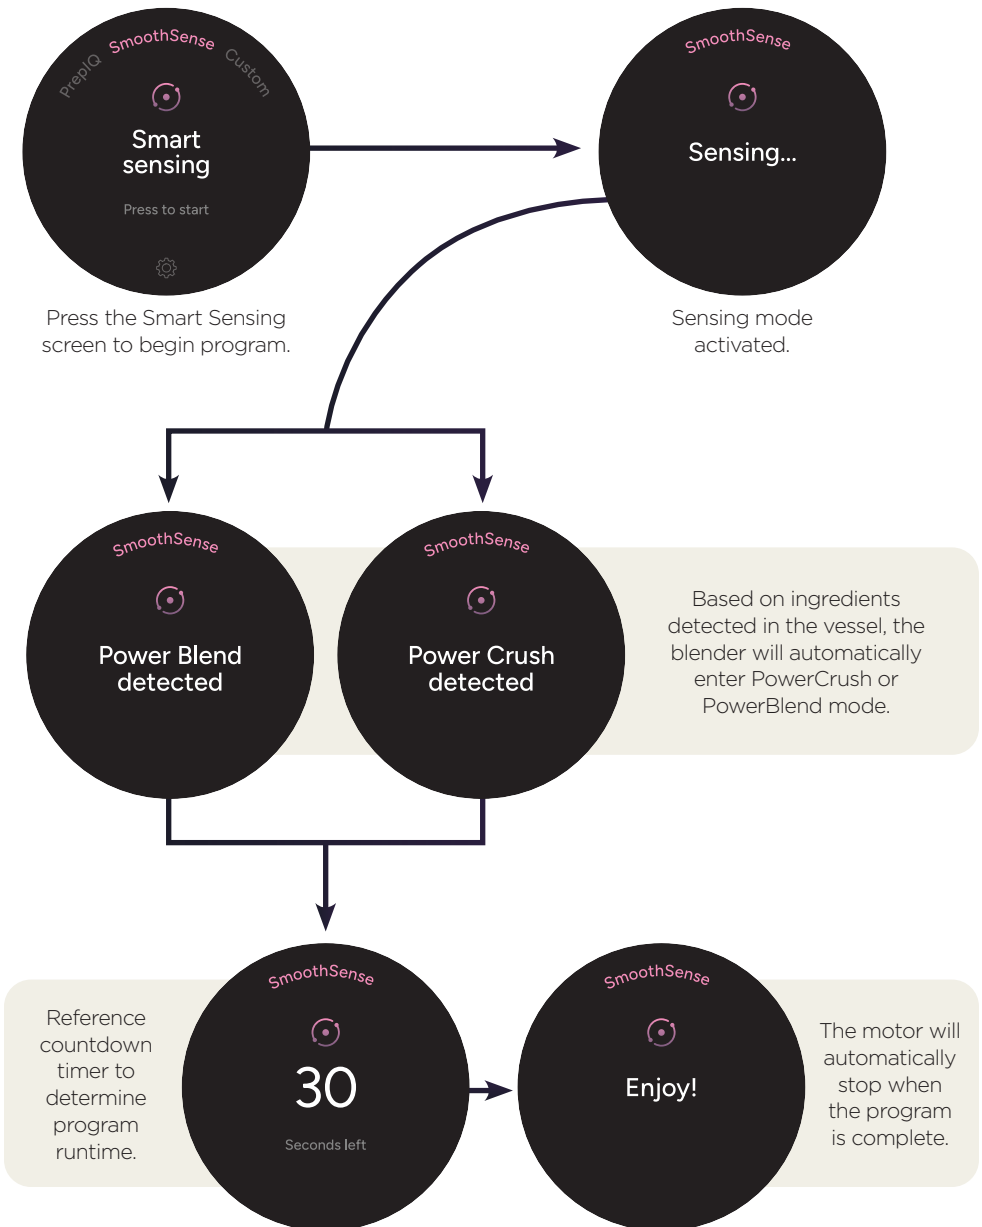

PrepIQ




Chef-vetted programs for seamless, precise chopping and mincing.

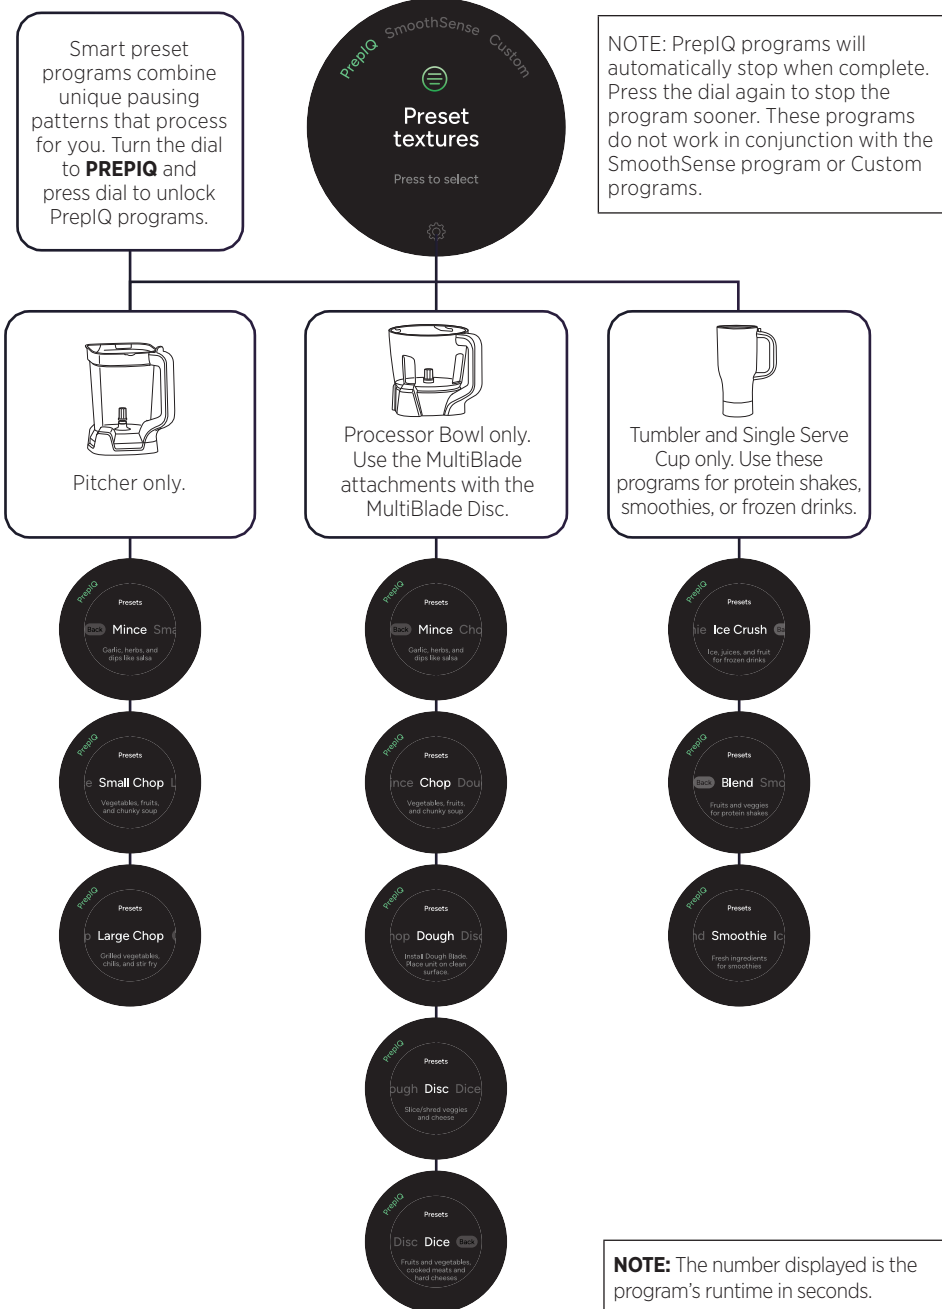

Custom



Stay in control with manual speed settings, from super smooth to super chunky.

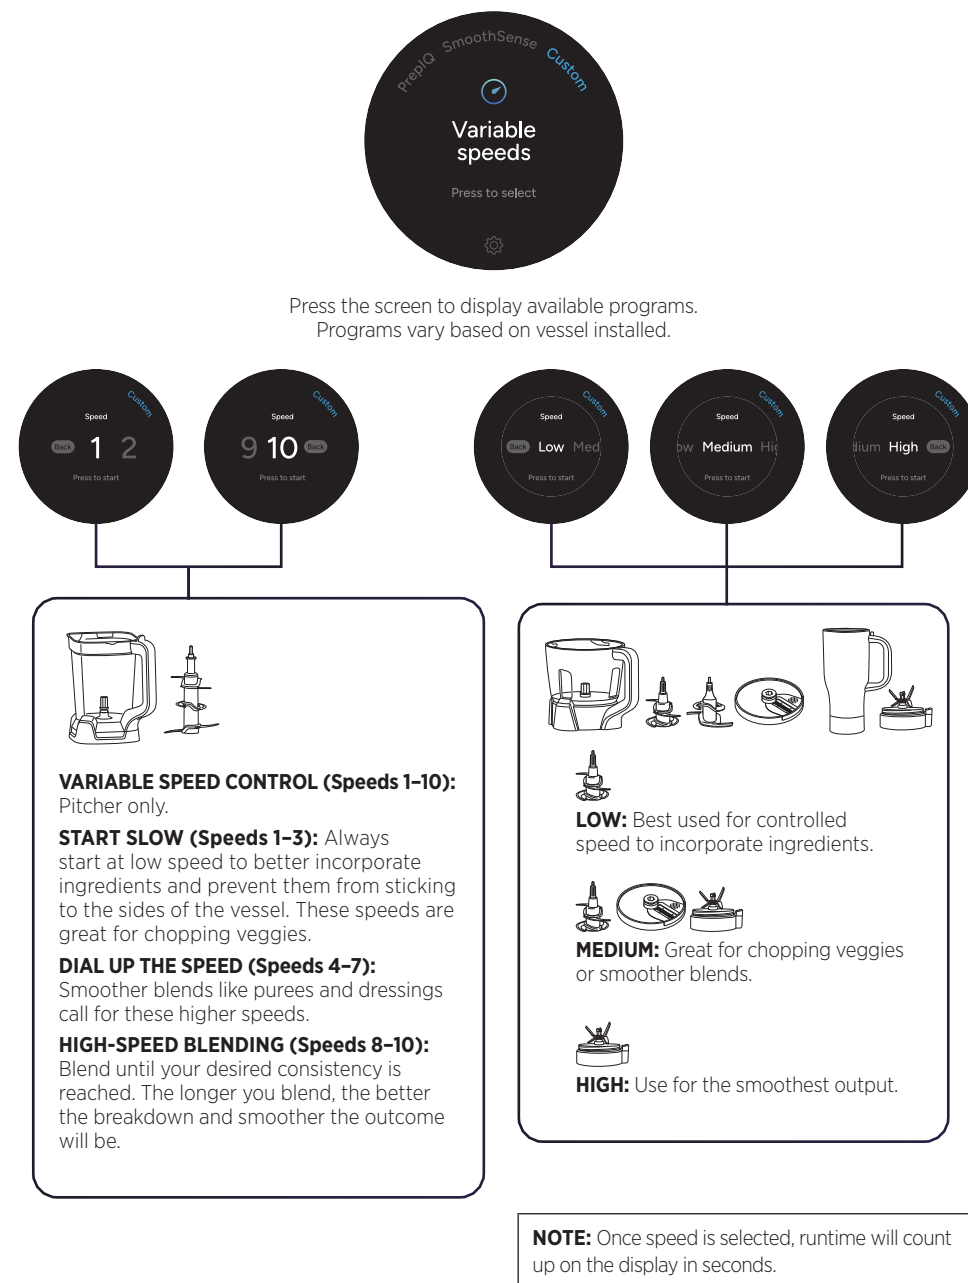

What's In The Box

 
PITCHER LID

With spout for easy pouring




TOTAL CRUSHING & CHOPPING BLADES (STACKED BLADE ASSEMBLY)

Blast through frozen fruit and ice in seconds




2.1L* PITCHER

Crush, chop, and make smoothie bowls in one compact versatile pitcher

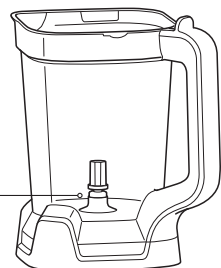


DISPLAY

Easy-to-use Start/Stop dial, SmoothSense button, custom, PreplQ, and pulse buttons

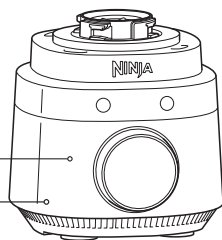

MOTOR BASE

Powerful high-speed motor with 1850 peak watts

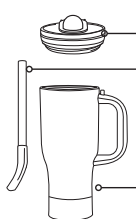


CRUSHBLADE ASSEMBLY

High-grade stainless steel blades break down frozen whole fruits and veggies, nuts, seeds, and ice for smoother blends

710ML+ TRAVEL TUMBLER WITH LID & STRAW

Create delicious drinks to take on the go

 FEED CHUTE LID & PUSHER



FOOD PROCESSOR BOWL

Use for even chopping, smooth purees, and processing up to 2 lbs. of dough.



DISC SPINDLE



MULTIBLADE DISC**

Perfect for outputs like thinly sliced cucumbers and crinkle-cut fries.



CHOPPING BLADE ASSEMBLY

Delivers consistent, even chopping.



DOUGH BLADE ASSEMBLY

Evenly mixes dough for pizzas, cookies, and pies.


*1.9L max liquid capacity.

**MultiBlade Disc attachments vary by model.

†650ml max liquid capacity.

Settings


Select your preferences using the dial and adjust at any time.

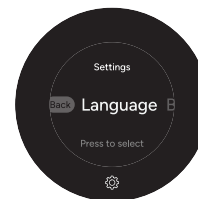


LANGUAGE:
Choose display language.



BRIGHTNESS:
Adjust screen brightness.

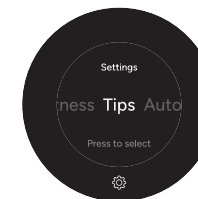

TIPS:
Shows program info and tips.

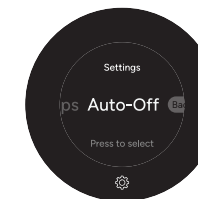

AUTO-OFF:
Unit turns off after being idle for 3 minutes.

Cleaning



Dishwasher

All parts except the motor base are top-rack dishwasher safe but should **NOT** be cleaned with a heated dry cycle.



Hand-Washing

Wash containers, lids, and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dishwashing utensil with a handle to avoid direct contact with the blades.



Quick Clean

Rinse the container and blade assembly under **WARM WATER** after processing. Fill the container up halfway with warm water and add **1-2 SMALL DROPS** of dish soap. Reinstall the container with the blade installed onto the motor base. Press the Pulse button a few times, then empty and rinse.



WARNING: Handle the blade assemblies with care when washing, as the blades are loose and sharp. Contact with the blades' edges can result in laceration.



ATTACH VESSEL

Illuminates if no vessel is installed or if a vessel is installed incorrectly. To resolve, reinstall the vessel on motor base and ensure the lid is properly attached.



ADD LIQUID

When using the Tumbler Cup, this illuminates if, during blending, your recipe requires more liquid to blend. When **"ADD LIQUID"** displays on the dial, press the dial to stop current program and remove the cup from the base. Add 1/2 to 1 cup additional liquid. Reinstall the cup, then press the dial to run the SmoothSense program again.

MAKES: 4-6 SERVINGS

650ml milk of choice
330g whole frozen strawberries
300g sliced frozen banana
or 1 fresh banana
230g Greek yoghurt
1 tablespoon honey
1 teaspoon vanilla extract

CHUNKY SALSA

MAKES: 8-10 SERVINGS

3 Roma tomatoes, cored,
cut in half

6g coriander, stems removed

½ yellow pepper, seeded,
cut in quarters

½ jalapeno pepper, seeded,
ends cut off

½ red onion, peeled, cut in half,
ends removed

Whole peeled tomatoes,
drained

3 cloves garlic, peeled

1 tablespoon lime juice

1 ½ teaspoons cumin

1 ½ tablespoons sea salt

Ground black pepper,
as desired



- 1 Install stacked blade in the 2.1 litre Jug. Place all ingredients in the jug in the order listed, then install the lid.
- 2 Select **SmoothSense** and press the dial to start.
- 3 When blending is complete, remove lid and stacked blade. Divide the smoothie between glasses and serve immediately.



- 1 Install stacked blade in the 2.1 litre Jug. Place all ingredients in the jug in the order listed, then install the lid.
- 2 Rotate the dial to **PREP IQ**, press the dial, then rotate the dial to select **MINCE**. Press the dial to start.
- 3 When blending is complete, remove lid and stacked blade. Pour salsa into a large bowl and serve with tortilla chips.

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

NINJA CrushBOSS

SYSTEM with Ninja BlendBOSS Tumbler
& Pro-Precision Food Processor

Images may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

© 2026 SharkNinja Operating LLC.

NINJA, NINJA CRUSHBOSS, TOTAL CRUSHING, CRUSHBLADE and
MULTIBLADE are registered trademarks in the United Kingdom of SharkNinja Operating LLC.
LB401UKSeries_QSG_MP_Mv1