

NINJA®

Professional Stackable Chopper

NJ1002UK series

INSTRUCTIONS



IMPORTANT SAFETY INSTRUCTIONS

For Household Use Only

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:

READ ALL INSTRUCTIONS BEFORE USING YOUR NINJA® PROFESSIONAL STACKABLE CHOPPER.

IMPORTANT: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance.

This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.

WARNING: TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

1. To protect against electric shock, **DO NOT** immerse cord, plug or any part of the main unit in water or any other liquids.
2. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
3. **DO NOT** let the power cord hang over the edge of table or worktop, or touch hot surfaces, including the hob.
4. **DO NOT** use with damaged cord or plug.
5. **DO NOT USE** if the appliance is not working, has been dropped, dropped into water, damaged or left outdoors.
6. **NO SERVICEABLE PARTS.** Incorrect re-assembly or repair can cause a risk of electrical shock or injury to persons when the appliance is used. Contact Customer Service. This appliance contains no user-serviceable parts. All repairs should only be carried out by a qualified engineer. Improper repairs may place the user at risk of harm.
7. Remove the power cord from the mains power supply when not in use, before assembling or disassembling parts, and before cleaning.
8. **DO NOT** abuse the power cord. Never carry the appliance by the power cord. To unplug the appliance from the mains power supply, grasp the plug and not the cord and pull to disconnect.
9. **DO NOT** leave the appliance unattended whilst connected to the mains power supply.
10. **DO NOT** operate this appliance on or near any hot surfaces (such as gas or electric burners or in a heated oven).
11. The use of accessory attachments not sold or recommended by the manufacturer, may cause fire, electrical shock or risk of personal injury.
12. Extreme caution must be used when moving an appliance containing hot food, water or other liquids.
13. Always use this appliance on a dry, level and stable surface.
14. **DO NOT** remove the motor head before the chopping blades have stopped turning.
15. **CAUTION!** Chopping blades are sharp, handle with care, especially when removing the blade from the bowl, emptying the bowl and during cleaning. When handling the chopping blades, always hold by the plastic shaft.
16. **DO NOT** attempt to sharpen blades.
17. **DO NOT** expose containers to extreme temperature changes.
18. **DO NOT** use containers if they are cracked or chipped.
19. **DO NOT** use the appliance if chopping blades are bent or damaged.
20. Avoid contact with moving parts at all times. Keep hands, hair, clothing as well as spatulas and other utensils away from moving/cutting blades and containers during operation to prevent risk of severe personal injury and/or damage to the appliance. A scraper may be used but must be used only when the appliance is not running.
21. Exercise extreme caution when blending hot liquids.
22. Immediately release the On/Off pulse button on the motor head in the event that the appliance malfunctions during use.

23. To reduce the risk of injury, **NEVER** operate the appliance without the splash guard and bowl in place; **DO NOT** try to defeat the interlock mechanism; make sure that the cutting blades are properly assembled before operating the appliance.

24. **THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. DO NOT use outdoors.**

25. **DO NOT** use appliance for other than intended use.

26. **DO NOT** operate the appliance for more than 15 seconds.

27. **DO NOT** operate the appliance empty.

28. **DO NOT** overfill.

29. If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 10 minutes before using again.

30. Be certain cover is secured in place before operating the appliance.


 **WARNING:** Extension cords are not recommended for use with this product.

SAVE THESE INSTRUCTIONS

Contents

**Thank you for
purchasing the
Ninja® Professional
Stackable Chopper.**

Getting Started	4
Using the Chopper Bowl	6
Cleaning and Maintenance	8
Troubleshooting Guide.....	8

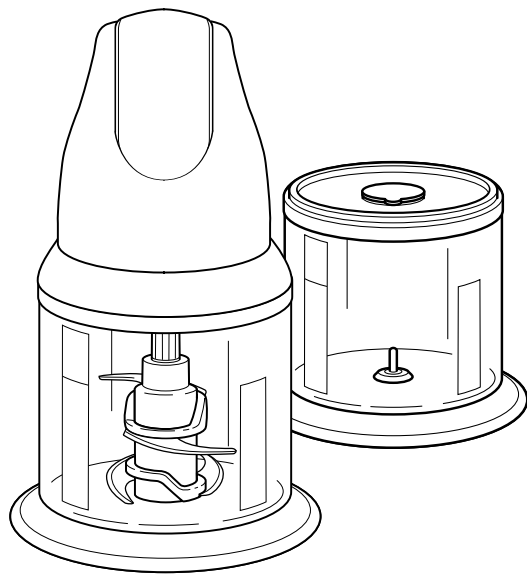

THIS BOOK COVERS MODEL NUMBERS:

NJ1002UKBK 30
NJ1002UKCR 30
NJ1002UKRD 30





TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz
Power: 200W
Bowl Capacity: 500ml

FEATURES:

- One touch pulse for precise control
- Processor Bowls - BPA Free
- Ninja® 4-blade technology
- Non slip base
- Stackable design for easy storage
- Seal tight storage lids / splash guards
- Dishwasher safe parts

Getting Started

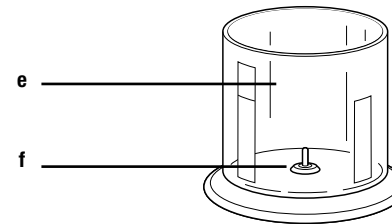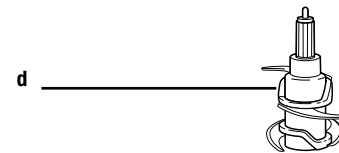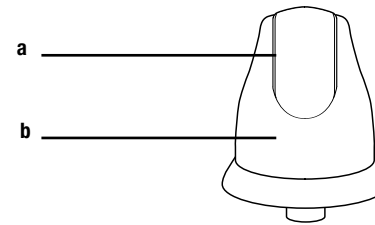


- a** On/Off Pulse Button
- b** Power Head
- c** Splash Guard / Storage Lid (x2)
- d** Ninja® 4-Blade

- e** Processing Bowl with Non-Slip Base (x2)
- f** Spindle Pin
- g** Power Cord (not shown)

Getting Started

The Ninja® Professional Stackable Chopper is an essential tool that is perfect for chopping and pureeing when preparing your favorite recipes. For best results, be sure to carefully read all the instructions contained in the manual before using this appliance.

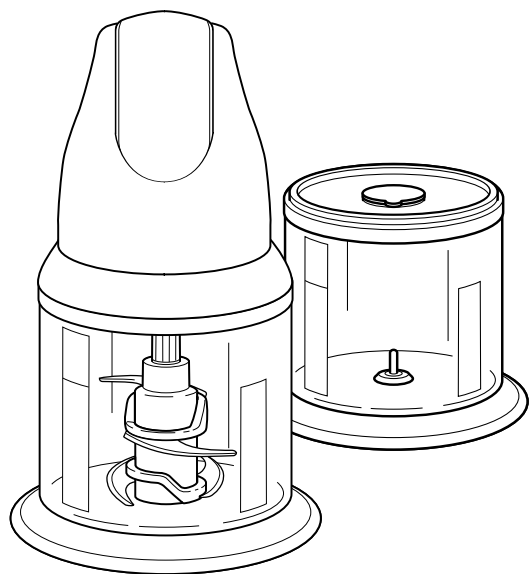

200 Watt Power Head

The 200 watt power head operates on 220-240V~ 50-60Hz electrical power. **NEVER** allow the power head to become wet when plugged into the mains power supply

- ⚠ **WARNING:** The power head should never be immersed in water or any other liquid.
- ⚠ **CAUTION:** Make sure that the power head is unplugged from the mains power supply and that the blades have stopped turning before attaching or removing any accessory.
- ⚠ **CAUTION:** Blades are sharp! Handle with care, especially when removing the blade from the bowl, emptying the bowl and during cleaning Use extreme caution when handling the blades. Always hold them by the shaft. Do not attempt to sharpen blades.
- ⚠ **IMPORTANT:** Never run the appliance empty.

Using the Ninja® Professional Stackable Chopper

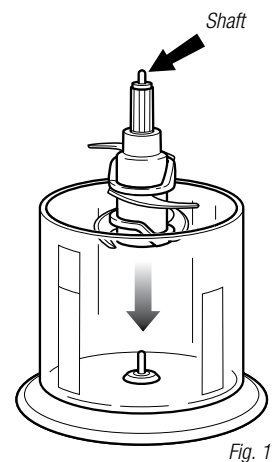


Fig. 1

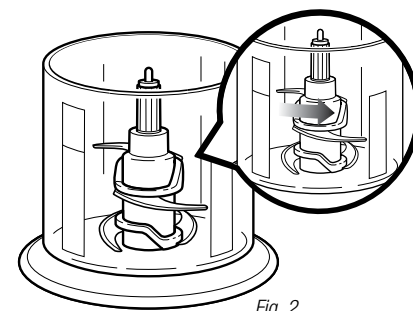


Fig. 2

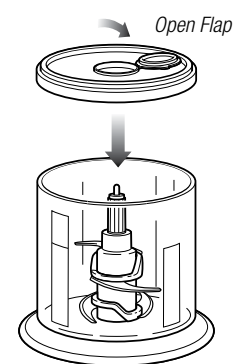


Fig. 3

- ⚠ **CAUTION:** Blades are sharp! Use extreme caution when handling the blades. Always hold them by the shaft.
- ⚠ **IMPORTANT:** Never run the appliance empty.
- 1 Place the processor bowl on a clean, dry, level surface.
- 2 Holding the chopping blade by the shaft, carefully place it over the spindle pin inside the processing bowl. (Fig. 1)
- ⚠ **IMPORTANT:** Always assemble the blades inside the container.
- ⚠ **WARNING:** DO NOT try to place the blades onto the power head and then into the Ninja® Professional Stackable Chopper.
- 3 Carefully spin the blade worktop clockwise to make sure that it has inserted properly. (Fig. 2)
- 4 Place the food ingredients into the bowl.
- ⚠ **IMPORTANT:** Never add ingredients into the processing bowl before placing the blade assembly in first.
- ⚠ **CAUTION:** DO NOT add ingredients past the 450 ml mark or 250 ml liquid ingredients as this may cause overflow.
- 5 Place the splash guard / storage lid on the bowl. (Fig. 3)
- ⚠ **CAUTION:** DO NOT operate without the splash guard in place.
- 6 Open the flap on the splash guard. (Fig. 3)

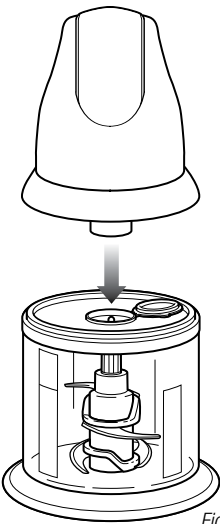


Fig. 4

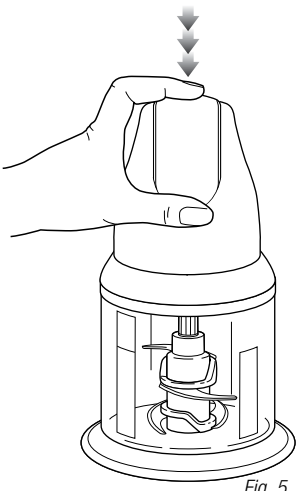


Fig. 5

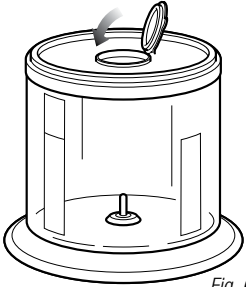


Fig. 6

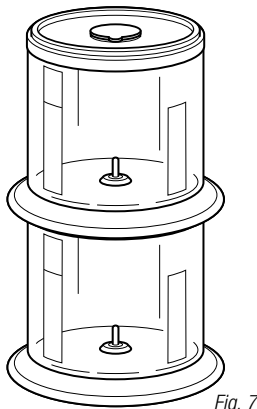


Fig. 7

- 7 Place the power head on top of the splash guard making sure that it is securely in place. **(Fig. 4)**
- 8 To start the appliance, plug the power cord into the mains power supply. While holding the power head, press down on the paddle located on top of the power head in short intervals. **(Fig. 5)**
- 9 Hold the bowl while pulsing the On/Off paddle to ensure the unit stays in place.
- ▲ **NOTE: DO NOT** operate the appliance continuously for more than 15 seconds at a time. Be careful not to over process. For coarsely chopped foods, use repeated short pulsing action until the desired consistency is reached.
- 10 To stop the appliance, remove your fingers from the on/off paddle.
- 11 For best results, press the on/off paddle in short pulses.
- 12 Make sure that the blades have stopped completely before removing the power head.
- 13 Remove the blade assembly by its shaft before you empty the contents of the processing bowl.
- 14 Place the storage lid onto the top of the processing bowl and close the flap to store. **(Fig. 6)**

Stacking & Storing

- Place the lid securely on the bowl and close the flap to store.
 - Remove the chopping blade when storing the bowls with food inside.
 - The bowls can be stacked for storing in the refrigerator or cabinet. **(Fig. 7)**
- NOTE:** The bowls do not lock together when stacked for storage. Be careful when removing stacked bowls from the refrigerator or cabinet.
- Use a dry erase marker to write the date or contents in the indicator area if so desired. To remove the dry erase marker, wipe clean with a damp cloth.

- ▲ **CAUTION:** Make sure that the power head is unplugged from the mains power supply before inserting or removing any attachment and before cleaning.
- DO NOT** immerse the power head into water or any other liquid. Clean with a damp sponge or cloth and wipe dry.
- CLEANING:** The processing bowls, splash guards/storage lids, and chopping blade are all dishwasher safe. Carefully place the parts on the top rack.
- ▲ **CAUTION:** Blades are very sharp.

Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Motor Doesn't Start or Blades Don't Rotate.	Check that the bottom of motor head is clean and there is no food blocking connection when placing on containers. There is too much food in the container. The unit has overheated. Unplug and wait approximately 10 minutes before using again. Make sure the power head is securely placed on splash guard. Check that the plug is securely inserted into the mains power supply. Check fuse or breaker. Replace fuse/reset breaker.
Food is Unevenly Chopped.	Either you are chopping too much food at one time, or the pieces are too big. Try cutting the food into smaller pieces of even size and processing smaller amounts per batch.
Food is Chopped Too Fine or is Too Watery.	The food has been over processed. Use brief pulses or process for shorter time. Let blades stop completely between pulses.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]

VISIT US ONLINE AT:

ninjakitchen.co.uk

Or follow us on any of our social media pages:



@ninjakitchenuk



NOTE: Save these instructions. Keep for future reference.



This marking indicates this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material sources. To return your used device, please use the return and collection systems or contact the retailer where this product was purchased. They can take this product for environmentally safe recycling.

**SharkNinja Europe Limited,
3150 Century Way,
Thorpe Park,
Leeds,
LS15 8ZB, UK
0800 862 0453
ninjakitchen.co.uk**

**SharkNinja Germany GmbH,
c/o Regus Management GmbH,
Excellent Business Center 10.+11. Stock,
Westhafenplatz 1,
60327 Frankfurt am Main, Germany**

Illustrations may differ from actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

NINJA is a registered trademark of SharkNinja Operating LLC.

© 2021 SharkNinja Operating LLC

NJ1002UK_Series_30_IB_211022_MV1
PRINTED IN CHINA

